

1.1 SimpleSlide Operation

This section refers to utilizing the SimpleSlide manually without the automatic air pressure feature and remote control.



Figure 0.1 Handle(PN 45512) / Hook(PN 45514) Extension

1. For a turn that requires the hitch to slide, stop the truck and locate the handle and hook extension. On the driver side of the truck, locate the retaining pin and release lever on the slide frame.

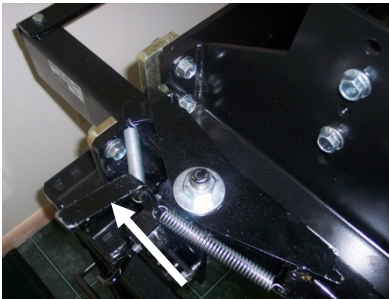


Figure 0.2 Retaining Pin location

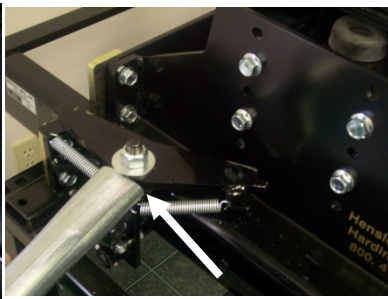


Figure 0.3 Locking mechanism

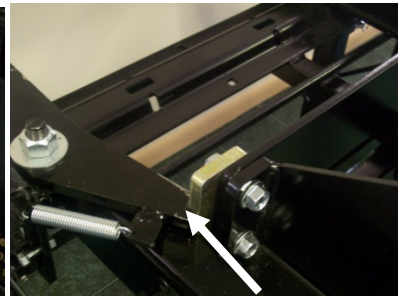


Figure 0.4 Turn tow vehicle position

2. Use the hook to pull outward on the retaining pin and use the handle extension to push release lever to the rear position, unlocking the hitch from the forward towing position.
3. After the locking mechanism is released the hitch may be slid to the rear position. With one hand on the manual button of the brake controller, slowly pull forward until hitch locks in the rear position.
4. At this point, the tow vehicle can be turned. To return hitch to standard forward position, reverse these steps.

Notice:

Never tow the trailer in the rear/slid position at a speed greater than 10 MPH.

Make sure locking mechanism is engaged on both sides of the slide frame.